Example of Corner installation

9560010

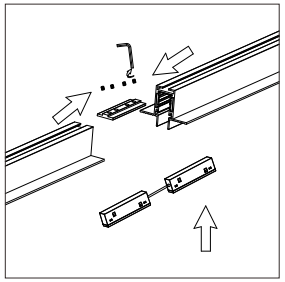

Insert the mechanical connector & tie up screws

9550040

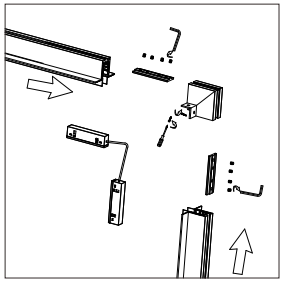

Connect the tracks together by tying up the screws

9550030

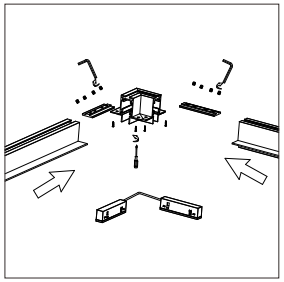

Click the tracks together & tie up the screws

9560010

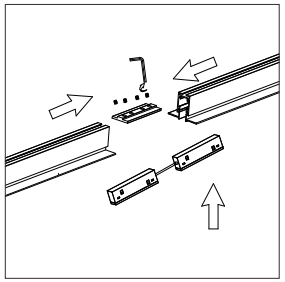

Insert the mechanical connector & tie up screws

9560220

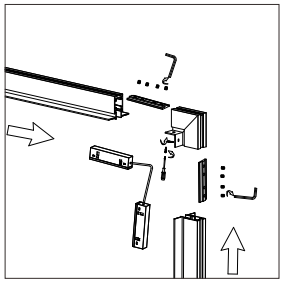

Connect the tracks together by tying up the screws

9560210

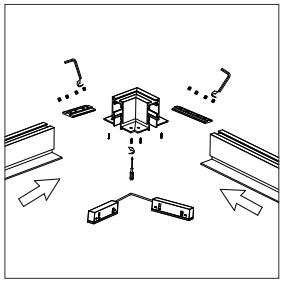

Click the tracks together & tie up the screws

9560010

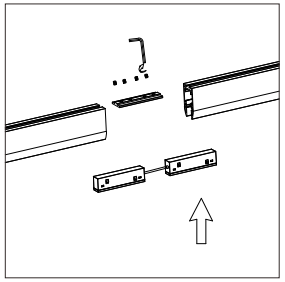

Insert the mechanical connector & tie up screws

9550070

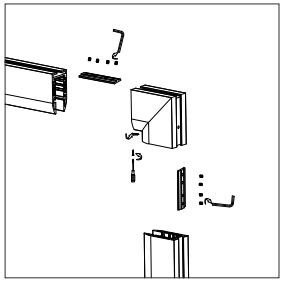

Connect the tracks together by tying up the screws

9550060

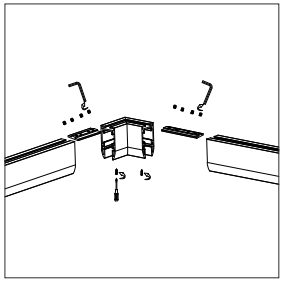

Click the tracks together & tie up the screws

NOVA LUCE

INSTALL

9010311 / 9011140 / 9010304

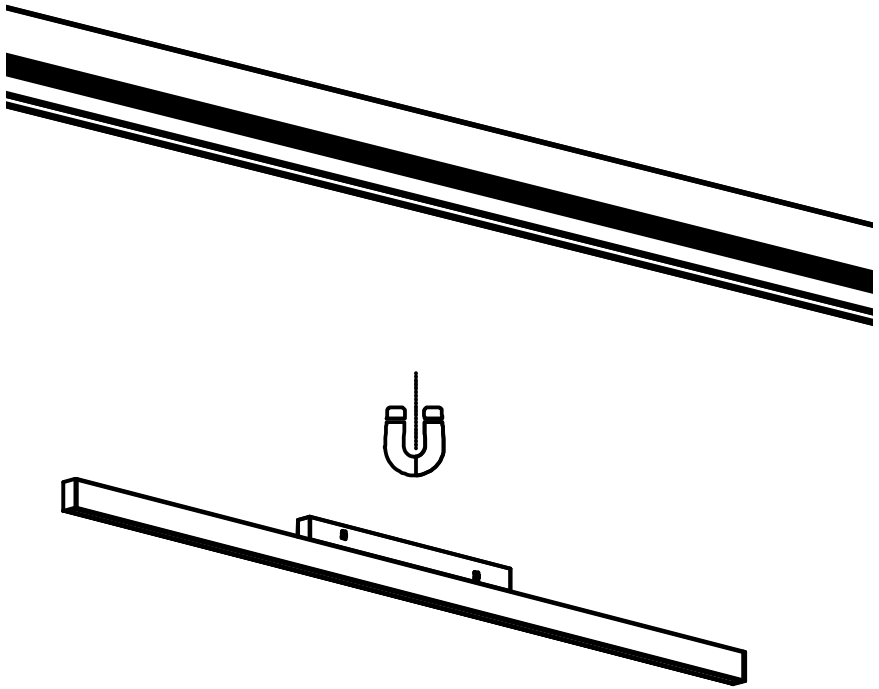

NOVA LUCE

Example of Recessed installation

9550010 / 9550012



Step:1

Create a CutOut



Step:2

Make holes



Step:3

Apply plastic anchors



Step:4

Tie up screws
to assemble parts

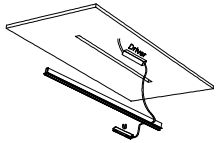

Step:5

Connect wires
& fix it into place



Step:6

Apply screws
to make it stable



Step:7

Apply a sealer

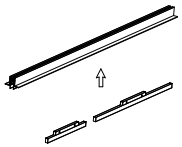

Step:8

Click it into place

Example of Recessed installation

9550011 / 9550013



Step:1

Create a CutOut



Step:2

Make holes



Step:3

Apply plastic anchors



Step:4

Tie up screws
to assemble parts

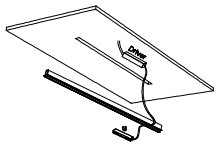

Step:5

Connect wires
& fix it into place

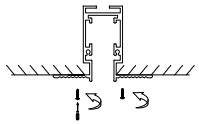

Step:6

Apply screws
to make it stable



Step:7

Apply a sealer

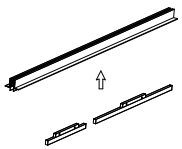

Step:8

Click it into place

Example of Ceiling installation

9550014 / 9550020



Step:1

Create a CutOut



Step:2

Make holes



Step:3

Apply plastic anchors



Step:4

Tie up screws
to assemble parts

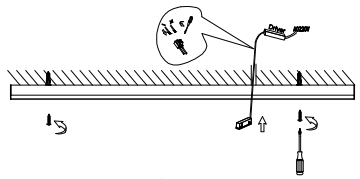

Step:5

Connect wires & fix it into place by tying up screws

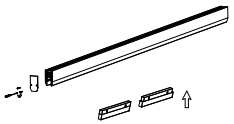

Step:6

Click it into place

Example of hanging installation

9560030 / 9560040



Step:1

Make holes



Step:2

Apply plastic anchors

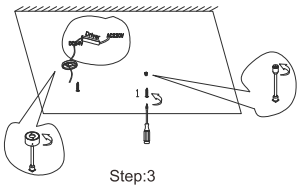

Step:3

Connect wires & assemble parts by rotate



Step:4

Insert screws into place

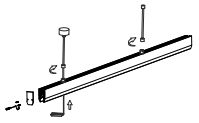

Step:5

Connect electrical connector
& assemble parts by rotate



Step:6

Connect wires
tie up parts together
& fix it into place by rotate

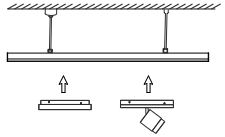

Step:7

Click parts into place